


# International Morse Code

A	• —	U	• • —
B	— • • •	V	• • • —
C	— • — •	W	• — —
D	— • •	X	— • • —
E	•	Y	— • — —
F	• • — •	Z	— — • •
G	— — — •		
H	• • • •	1	• — — — —
I	• •	2	• • — — —
J	• — — — —	3	• • • — —
K	— • — —	4	• • • • —
L	• — • •	5	• • • • •
M	— — •	6	— • • • •
N	— • —	7	— — • • •
O	• — — —	8	— — — • •
P	• — • — •	9	— — — — •
Q	— — • — —	0	— — — — —
R	• — • •		
S	• • •		
T	—		

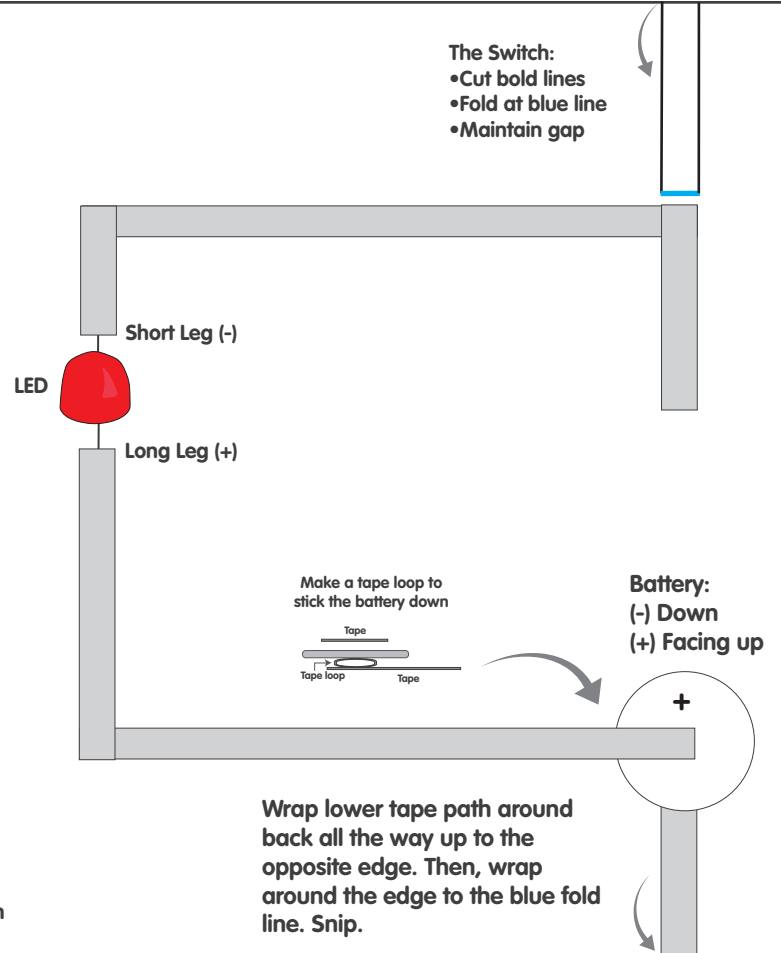

Wrap tape BACK around this edge to the front  
and lay tape to blue line of switch blade.

## ALTERNATE LED POSITION



LED can also be poked through & mounted on the back  
with the rest of the circuit on the opposite side if you prefer.

After wrapping tape around edge, follow  
the tape path upward from here as shown.